

PassagePoint™




How to Change Brightness - Logitech Web Camera

To change the brightness of images taken with the Logitech Web Camera,


1. Download and install the Logitech Webcam Software, if not already installed.

<http://downloads.stopware.com/updates/Logitech/lws251.zip>


2. Launch the Logitech Webcam Software
3. Click on the “Webcam Controller” in the red box.

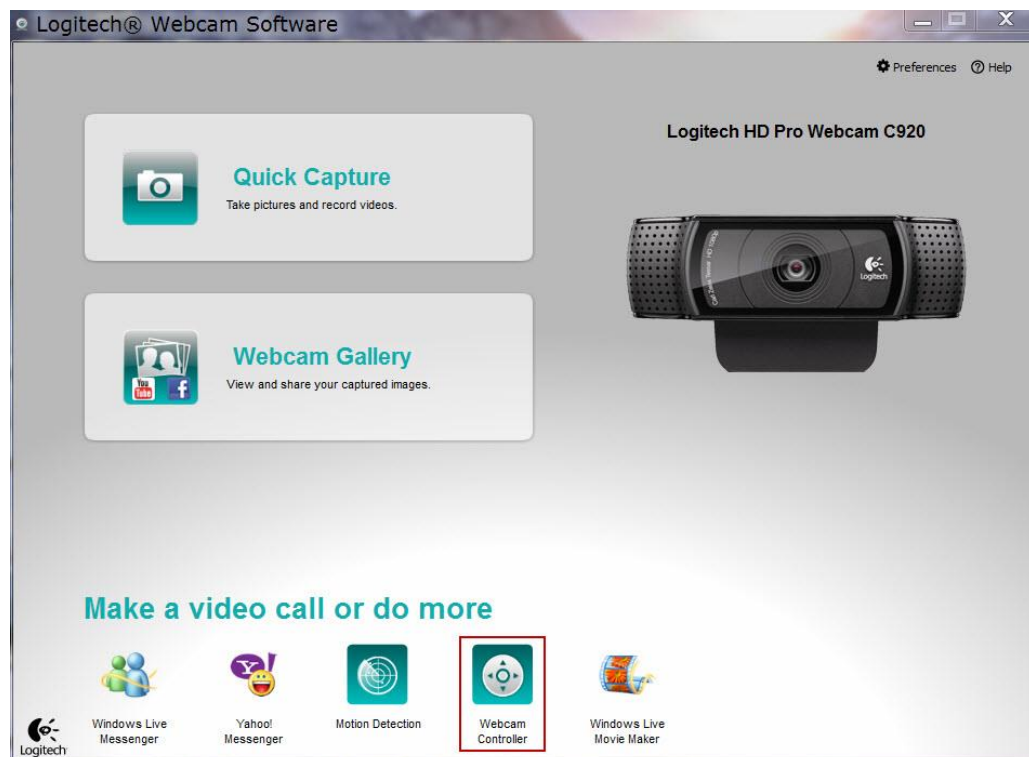

4. In the Web Cam Controller>> Click on Advanced Settings

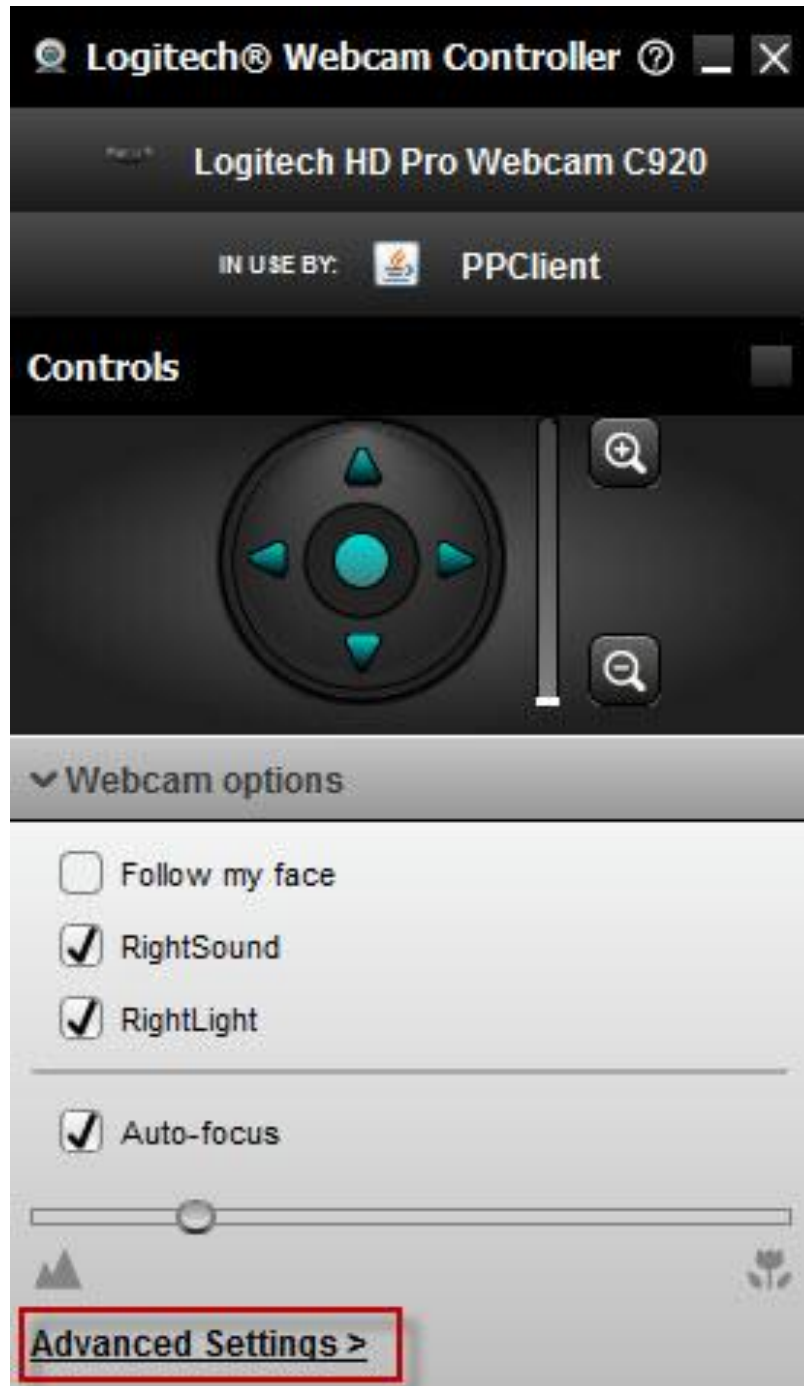


5. To Change the properties, uncheck “AUTO” (boxed in red).
6. Change the Brightness to the desired Brightness and select “Save”.

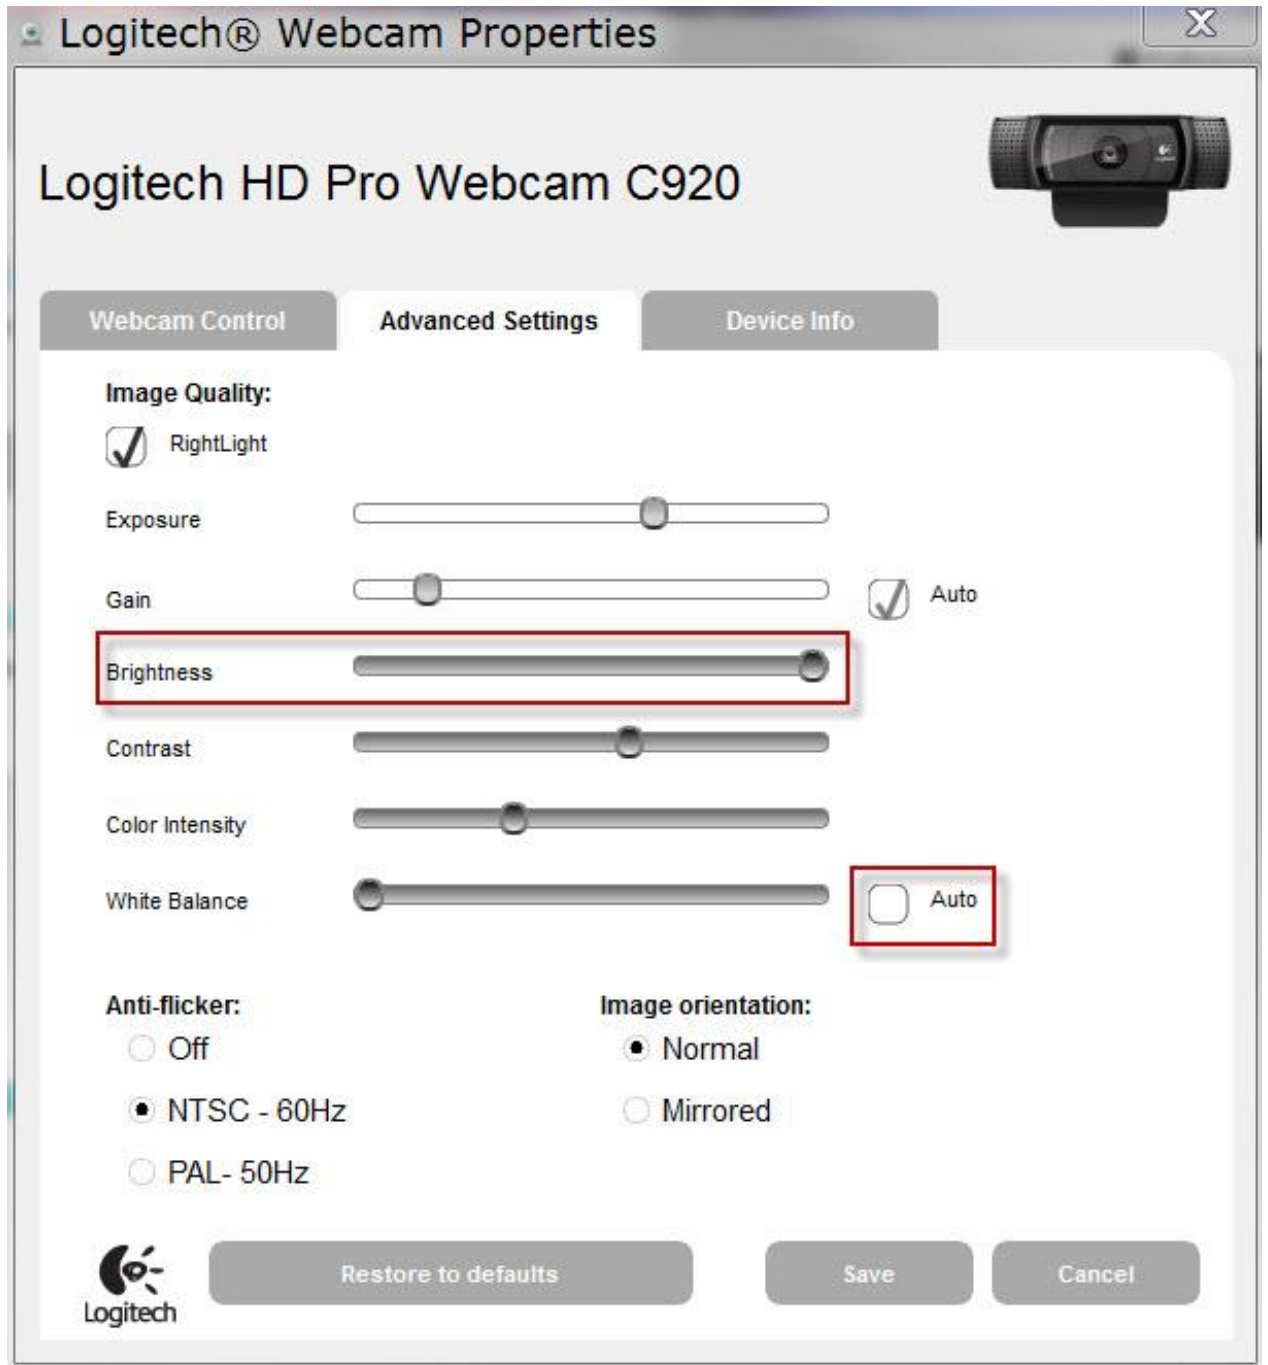

Brightness Capture Examples

(only changed brightness level; other setting as shown above)

Captured with maximum Brightness setting:

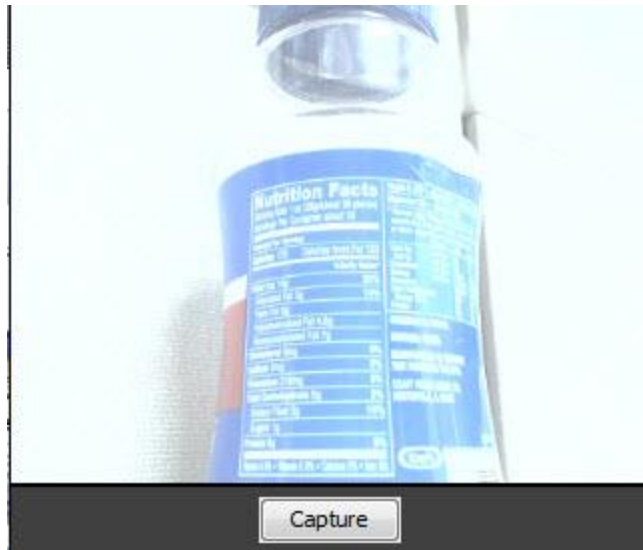

Captured with minimum Brightness:



FOR ADDITIONAL INFORMATION, CONTACT US:

STOPware, inc. | 5000 Pleasanton Avenue, Suite 210 | Pleasanton, CA 94566
Phone: 408.367.0220 | www.stopware.com